



ECO-LINK PRIVACY FENCE SLATS

100% RECYCLED AND RECYCLABLE



Design: Single Wall, Cap-Style shape. Slats rest on matching Bottom Channel along with an optional Top Channel lock.

Installation: Bottom Channel inserts along lowest weave of the fence. Slats are inserted vertically until resting in Bottom Channel. Top Channel can be inserted to lock slats in place OR another slat can be installed horizontally for a different look and reduced movement.

Materials: Slats are extruded from a recycled blend of Rigid and Flexible PVC. UV inhibitors are added to reduce impact of solar exposure while maintaining colour integrity and extending the life of the slat.

Maintenance: Dynacore's Eco-Link Slats are very low maintenance. They are easily cleaned with a pressure washer or simple garden hose.



Standard Heights:
4, 5, 6, 8 feet

Slat Length:
3.5" shorter than overall fence height

Wind Load and Privacy Factor:
Approximately 80% load and coverage

Warranty / Disclaimer: Limited 10 year warranty on breakage under normal conditions. Dynacore cannot be held responsible for damages resulting from wind load conditions due to inadequate structural support.

White

Grey

Black

CUSTOM COLOURS ON REQUEST

Authorized **DYNACORE SOLUTIONS** Distributor



AW SALES & DISTRIBUTION

AW Sales & Distribution Ltd.
Unit 101, 616 - 71 Avenue SE
Calgary, AB T2H 2R1

1-877-596-0813 sales@awsales.ca

ENVIRO-SLAT

PRIVACY FENCING

Made for chain link fences with 2-inch mesh opening.

Each bag covers 10 linear feet.

Approximately 80% privacy.





Conçu pour clôtures à mailles avec l'ouverture de 2

pouces Chaque sac couvre 10 pieds lineaires


Environs de 80% d'intimité

Easy Installation Guide/Guide D'Installation

1. Insert Bottom Channel at lowest full mesh/Insérer le Bottom Channel au bas du clôture
2. Slide Slats down mesh into Bottom Channel/Glissez les lamelles dans le Bottom Channel
3. Slide Top Channel over top of slats/Glissez le Top Channel par-dessus le bout des lamelles
4. Will fit most fences. If trimming required, trim 1/4 inch below top full mesh/
S'adapter aux plupart des clôtures. S'il faut couper, enlever 1/4 d'un pouce en bas du haut carre

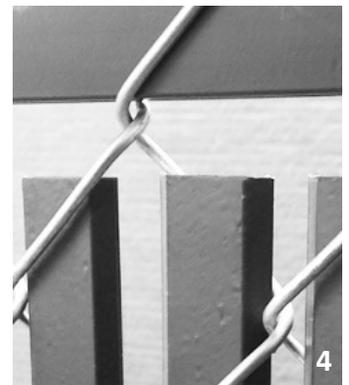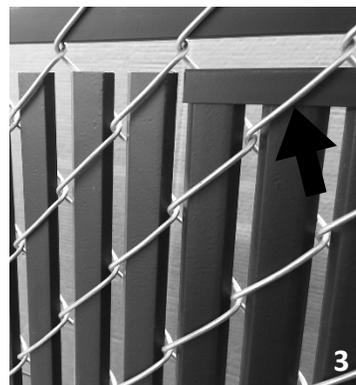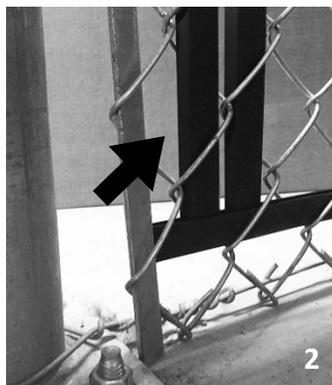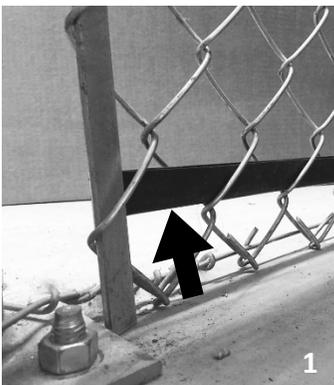

Each Bag Contains:



3 Top Channels



82 Slats



3 Bottom Channels

Authorized **DYNACORE** SOLUTIONS Distributor



AW Sales & Distribution Ltd.
Unit 101, 616 - 71 Avenue SE
Calgary, AB T2H 2R1
1-877-596-0813 sales@awsales.ca

Eco-Link Privacy Fencing

AW Sales & Rentals is pleased to add a new product to our growing roster of eco-friendly products. Our Dynacore Eco-Link Privacy Fencing is designed with the environment, security, and aesthetics in mind so you can do your bit for nature while still maintaining your privacy at home in style.

Why choose Dynacore Eco-Link Privacy Fences?

The Dynacore Eco-Link Fences give you the security and privacy you need for your property. You can even upgrade your existing chain-link fence using Eco-Link Fencing to beautify your property and increase privacy at the same time.

Easy Installation:

The Eco-Link Fencing System is easy to install – whether you are putting up a new fence or upgrading your existing one. The single wall, cap-style shape allows slats to rest easily on matching bottom channel (with optional top channel lock). The bottom channel inserts are easily placed along the lowest weave of the fence making it hassle-free to insert the vertical slats. Top channels can be used to lock the fence into place, or you can install another horizontal slat to reinforce the fence further.

Privacy:

The Eco-Link Privacy Fence adds 80 percent more privacy than a standalone chain-link fence.

Eco-Friendly:

Eco-Link Fences are made from 100 percent recycled material. What's more is that unlike many composite fences, ours are 100 percent recyclable too.

Durable:

We use a recycled blend of Rigid and Flexible PVC to make our slats. UV inhibitors are added to reduce impact of solar exposure while maintaining colour integrity and extending the life of the slat.

High Quality:

Our fences are manufactured in Canada to ensure the highest quality *and* reduce the environmental impacts of transport.

Low Maintenance:

The Dynacore's Eco-Link Slats are very low maintenance. They are easily cleaned with a pressure washer or simple garden hose saving you time, money, and eliminating the need for chemicals.

Variable Heights:

We understand that different customers need varying degrees of security and privacy. Which is why the Eco-Link Fences come in varying heights of 4, 5, 6, and 8 feet. Slats are 3.5" shorter than overall fence height. We also offer customised heights if you have special requirements.

Multiple Color Options:

The Dynacore Eco-Link Fences come in three popular colors – white, black, and grey. We offer custom colors on request so you can color your fence to suit your style!

Affordable:

Each bag contains 3 top channels, 3 bottom channels and 82 slats which cover approximately 10 linear feet making Eco-Link Fencing an affordable solution for your fencing needs. You also get a 10-year limited 10-year warranty on breakage under normal conditions.

If you are thinking of installing a new fence, or upgrading an existing one, we at AW Sales & Rentals are happy to help. [Get in touch with us](#) for more information on Dynacore Eco-Link Privacy Fences or to get a free quote today!